



Ou kapab mete bouton èd la kòm yon braslè oswa yon kolye.



Nou la pou nou ede.  
Rele nan (800) 232-1700  
pou asistans.

#### ENPÒTAN

Siyen Akò sèvis la kote yo mande pou fè sa epi retounen li bay manadjè kominote w la.


# Ann kòmanse

- ▶ Swiv etap ke yo dekri yo pou konfigire sistèm ou an.
- ▶ Al gade **Fòmilè Enfòmasyon sou Kont ou a** epi rele nou si w bezwen fè nenpòt chanjman.
- ▶ Siyen **Akò Sèvis la** kote yo mande pou fè sa epi retounen li bay manadjè kominote w la.



## SWIV ETAP FASIL SA YO POU KÒMANSE

### Jwenn yon kote

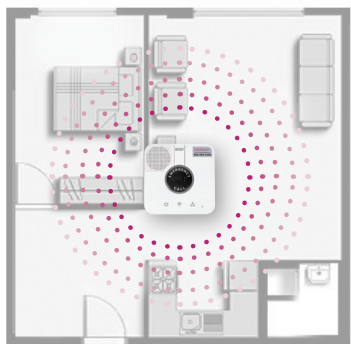


Metè aparèy ou an nan yon **kote ki nan mitan**ki genyen **bon sinyal pou selilè**

### Ploge li



Jwenn yon priz ki **toujou limen** epi **ki pa kontwòle pa yon enteriptè** oswa yon **kwonmèt**

### Limèn li

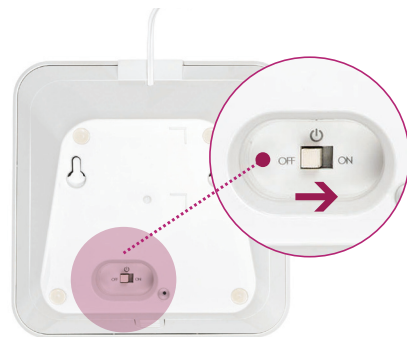

Glise **enteriptè On/Off la** ki anba aparèy la pou metè li **sou pozisyon "ON"**

### Kite l konekte



Tan jiska **2 minit** pou aparèy la konekte ak rezo selilè a

### Teste li



Rele **844-303-3443** epi **pese bouton èd la**

## KONNEN APARÈY OU

### POWER



#### RETE LIMEN NÈT

Kouran konekte

#### LIMEN ETENN

Sistèm dekonekte

#### LIMYÈ A ETENN

Sistèm nan pa gen kouran

### SÈVIS TELEFÒN SELILÈ



#### RETE LIMEN NÈT

Sèvis Selilè Disponib

#### OSWA LIMEN ETENN



#### RETE LIMEN NÈT

Deplase aparèy la nan yon zòn

#### OSWA LIMEN ETENN

ki genyen pi bon kouvèti selilè

### SISTÈM



#### RETE LIMEN NÈT

Rele sèvis kliyan

#### OSWA LIMEN ETENN

### IJANS



#### LIMEN ETENN

Alam Medikal ankou

Kesyon? Rele nan (800) 232-1700